


NOTES :

1. PENETRATION POCKETS ARE NOT THE PREFERRED FLASHING METHOD AT THE PENETRATIONS BECAUSE THEY MAY BE A CONSTANT MAINTENANCE PROBLEM. SEE DETAIL BUR-11 FOR THE PREFERRED FLASHING METHOD.
2. REFER TO INTRODUCTION FOR ADDITIONAL INFORMATION.

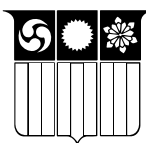

**NATIONAL
ROOFING
CONTRACTORS
ASSOCIATION**

PENETRATION POCKET

2001

NOT DRAWN TO SCALE

BUR-19