


NOTES :

1. UNDERLAYMENT TYPE AND NECESSITY MAY VARY DEPENDING ON CLIMATIC CONDITIONS.
2. SHIMS SHOULD BE USED WHEN BATTEN LENGTHS ARE GREATER THAN 4'-0" [1.2 m].
3. SHIMS ALSO MAY BE USED UNDER BATTENS TO ENHANCE DRAINAGE.

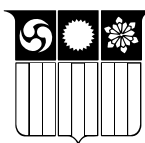

**NATIONAL  
ROOFING  
CONTRACTORS  
ASSOCIATION**

**EAVE FLASHING**

2001

NOT DRAWN TO SCALE

**TILE-4**